


Sill not less than 5' long better 6' long

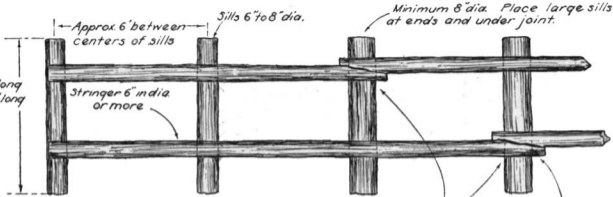


If floor is not covered with dirt, adz off round of puncheon as indicated (See B)

Unless the sills and stringers are embedded in mud, don't have both stringers join on the same sill. Break or stagger joints

lap joint on stringer.

Binding Pole 5" to 8" in dia. recommended Fastened with tree nails or wired to sill.

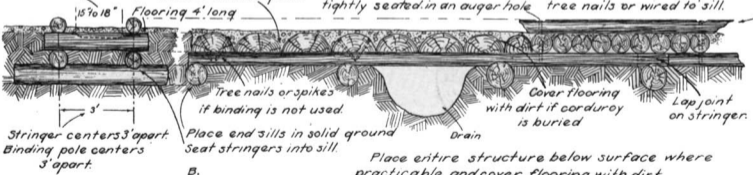

Tree nail 1' to 1 1/2" in dia. tightly seated in an auger hole

Stringer centers 3' apart. Binding pole centers 3' apart.

Place end sills in solid ground Seat stringers into sill.

Cover flooring with dirt if corduroy is buried

Place entire structure below surface where practicable and cover flooring with dirt.



A method of placing split flooring to make a fairly even floor This method is cheaper and equally as good as the adzed surface.